

CorkSport Performance

GEN-3-318 Bearing Dust Boot

Installation Instructions for the CorkSport Performance Bearing Dust Boot

Written By: Cody Dunton



INTRODUCTION

In this installation guide we have provided step by step instructions to setup, install the CorkSport Performance Bearing Dust Boot



PARTS:


- [GEN-3-318 Bearing Dust Boot](#) (1)

Step 1 — Getting Started




- First and foremost; **THANK YOU** for becoming a part of the CorkSport Family. We hope to bring you the highest level of Parts, Customer Service, & Support
- ① **How To Use These Instructions:**
The instruction format will relate colored marking in the image to the color dot in the text to the right of the image

Step 2 — Dust Boot Install - Part 1

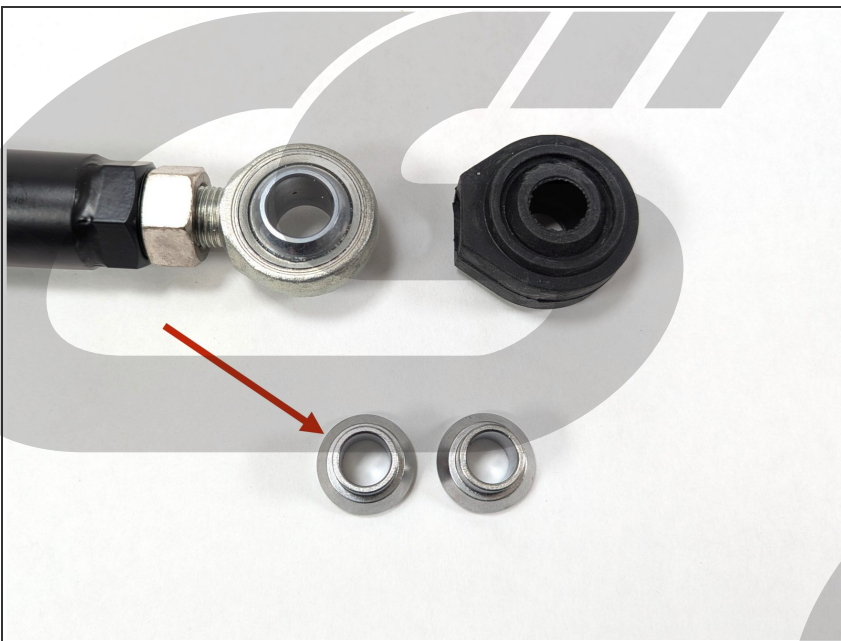

- ① These instructions reference the installation of the boots themselves. If your camber/toe arms are already installed on the car, they will need to be removed for the boot install. Please see the instructions for your specific arms for removal information.
- Start by removing the spacers that are installed into both sides of the spherical bearing

Step 3 — Dust Boot Install - Part 2

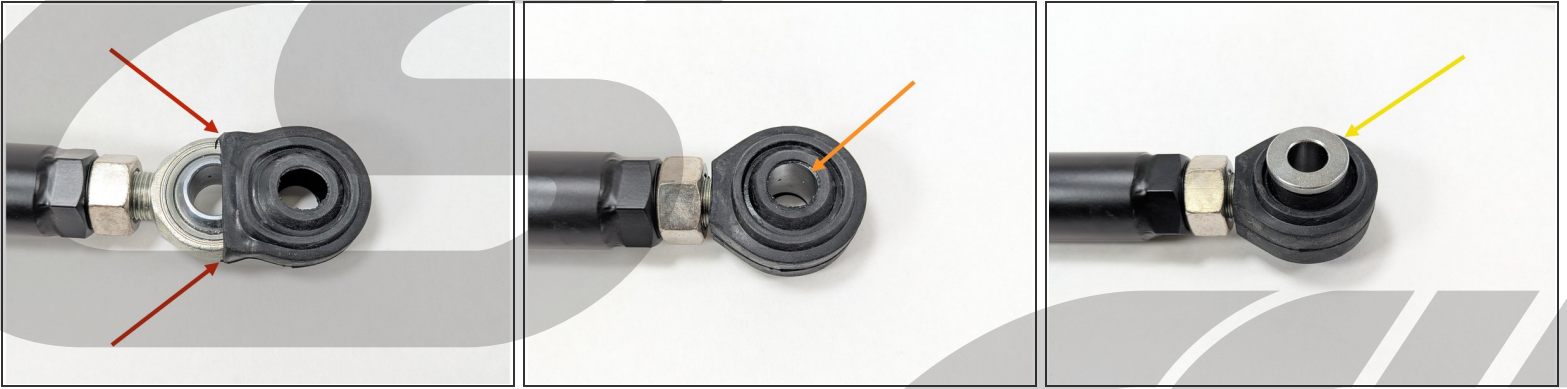

- Expand the end of the rubber dust boot over the end of the spherical bearing
 - ⓘ This process can be difficult and if needed using a lubricant such as glass cleaner may help slide the rubber dust boot over the end of the spherical bearing
- Once the dust boot is installed over the bearing, ensure the holes in the boot line up with the hole in the bearing
- Reinstall the spacers on both sides into the spherical bearing

Step 4 — Installation Complete



- This completes your installation of the CorkSport Performance Bearing Dust Boot!
- Contact us with any questions or concerns at sales@corksport.com or (360) 260-2675.
- Please leave a review here: <https://corksport.com>
- Share your experience using #CorkSport on Instagram, Facebook, and Twitter.

