

[c o r k s p o r t]



CorkSport RX8 Rear Floor Bar Installation Instructions

Tool required

- 14mm Socket
- 17mm Socket
- 3/8" Drive Ratchet
- Torque Wrench
- 8mm Allen Head Wrench.
- Phillips Head Screw Driver
- Gasket Scraper or Equivalent

Contents

- 1 CorkSport Rear Floor bar
- 4 M10 X 1.25 thread pitch nuts
- 8 Page Installation Instructions
- 4 3/8 inside diameter flat washers

NOTE: This bar was installed in our test vehicle without any trimming to interior panels, however, you may wish to trim the interior panels and if so, it is noted in the install instructions where to do so.

Warning: Read these entire installation instructions before beginning.

Step 1: Park your RX8 on smooth level surface, open trunk lid and empty trunk of contents.

Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 2: Remove four (4) plastic clips (center pull style) from rear interior trunk panel.
Remove panel from trunk by pulling up first then out.



Step 3: Remove four (4) plastic clips from left side interior panel and remove panel.




Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 4: Remove flat tire repair kit from right side interior panel. Remove 5 plastic clips from panel and remove panel.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 5: Remove four (4) 14mm head nuts from strut mount to vehicle (2 on each side).

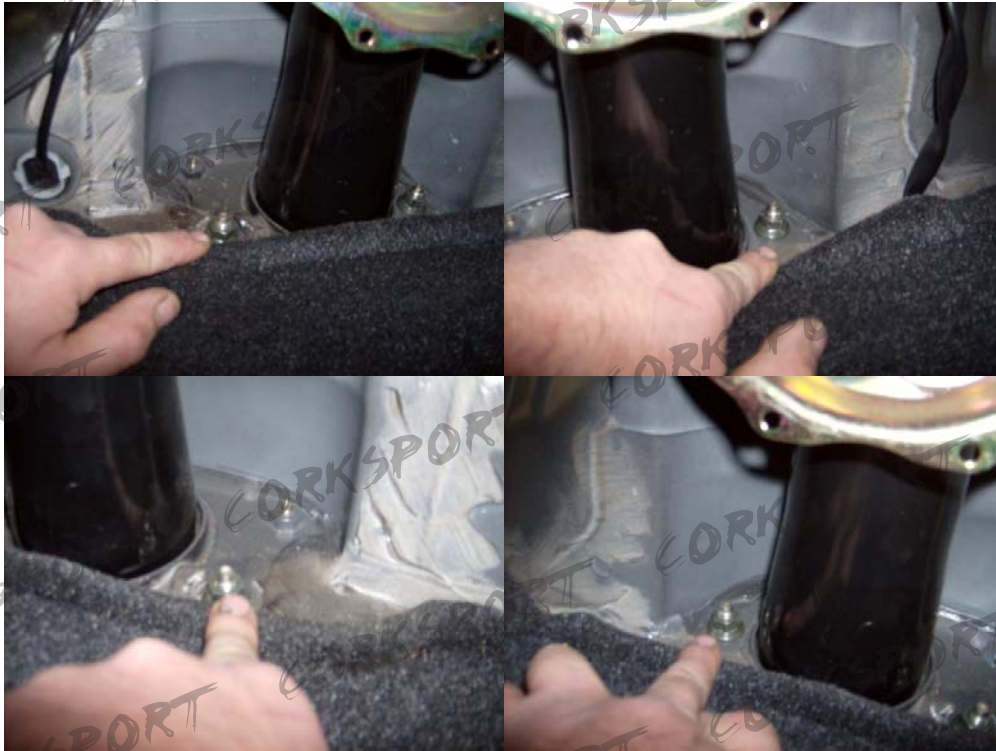

Step 6: With a gasket scraping tool, scrape excess seam sealer from around strut where shown in picture.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 7: Remove CorkSport floor bar from packaging. Loosen bolted end using a 14mm socket and 8mm allen head wrench. Install bar into RX8.



Step 8: Install four (4) supplied M10 nuts and washers on bar brackets. Tighten nuts to 34-46ft/lbs.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 9: Reinstall left side interior panel with its four (4) original plastic clips.

NOTE: You may choose to trim panel in location marked in first picture, however, it is not necessary.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 10: Reinstall right side interior panel with its five (5) original plastic clips. Reinstall flat tire repair kit.

NOTE: You may choose to trim panel in location marked in first picture, however, it is not necessary.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK

Step 11: Reinstall rear interior trim panel with its original four (4) plastic clips.



Installation complete. Enjoy your new floor bar.



Thank you for your purchase. If you have any questions please call Cork Sport at 360 260 CORK