



Installation instructions for RX-7 Stainless Steel Braided Clutch Line

## **Tools Required**

- · Tools needed:
- 17 mm wrench
- Sockets and driver; 12mm, 10mm, 8mm
- 8mm wrench
- 10mm wrench
- Pliers

## Contents

- 1 CorkSport Clutch Line
- 3 Page Instructions

Please read these instructions completely prior to installation. These instructions were meant as a guide only, the use of a factory service manual is recommended.

WARNING: Make sure engine is completely cooled down prior to starting installation or serious injury can occur.


Step 1: Start by taking the intercooler off. Remove both inlet hoses and the two bolts on either side of the intercooler.

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK



## CAUTION: Before removing the clutch line be sure the clutch master cylinder is full.

Step 2: Next loosen the hard line at the top of the clutch line, do not remove the clip until you have loosened the fitting. Use pliers to pull the clip out.

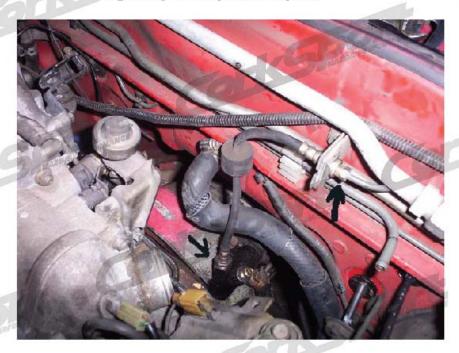

Step 3: Install the steel braided line. Use a rag and/or some brake clean to get rid of the fluid that dripped out of the lines, it will eat through paint quickly if not cleaned up.

CAUTION: Should any fluid come in contact with the paint, clean it up quickly to avoid damage to your paint.

Step 4: To bleed the clutch line and remove any air from the hydraulic system. Get a length of clear hose to fit over the bleeder screw you can use it to keep the fluid that comes out contained in a small cup or container (less mess).

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK.



Note: If you do not have an air compressor and/or air bleeder this is a two person job.

One person must pump the clutch pedal then keep it planted on the floor. Second person will open the bleeder valve a small amount to let the fluid and any air out. Make sure to close it before the other person releases the clutch pedal. Look for air bubbles if you have a clear hose attached. Do this several times until the clutch feels normal. Double check your fittings for leaks. Re-install the intercooler and enjoy.

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK