

## CorkSport Mazdaspeed 3 Shifter Bushings

2007-2009 Mazdaspeed 3

### Pre-Installation Notes:



These instructions were written for reference only and the use of a factory service manual is recommended. Please read these instructions thoroughly prior to starting installation



The shifter bushings will only fit the above referenced models. If you have a different model Mazda including a Mazdaspeed 6, these bushings will not work on your vehicle.

### Materials and Time:



#### General Info.

Part #: Axl-6-958-10

Time Est: 15 Min

Wrench Rating: 1/5



#### Tooling List

10mm socket and

long extension




#### Parts List

(4) 18mm Shifter Bushings

(4) Washers

### Installation Instructions:

1. Park vehicle on level ground and engage hand brake. Leave in neutral.
2. Remove the Stock Shifter Bushings.
  - A. Unscrew shifter knob.
  - B. Remove center console panel by pulling up around hand brake.
  - C. Remove panel around shifter by pulling up from the front.
  - D. Unplug wires from shifter panel,
    -  Be sure to remember where all of the wires plug back in to.
  - E. Unbolt the shifter base, using a 10mm socket and long extension. (See **Figure 1a** for bolt locations)
  - F. Remove stock shifter bushings.
3. Install the CorkSport Shifter Bushings
  - A. Install a shifter bushing under each shifter base. (**Figure 1a**).
  - B. Set supplied washers on top of base over bolt holes.
  - C. Reinstall the OEM bolts. Tighten to approximately 3-4 ft-lbs.
  - D. Plug connectors back into shifter panel. Reinstall shifter panel.
  - E. Reinstall center console panel.
  - F. Reinstall shifter knob.

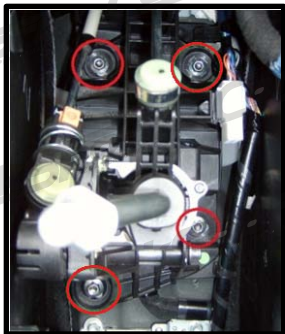


Figure 1a



[Check out our how-to video](#)