

CorkSport Mazdaspeed 3 Shifter Bushings

2007+ Mazdaspeed 3

Pre-Installation Notes:



These instructions were written for reference only and the use of a factory service manual is recommended. Please read these instructions thoroughly prior to starting installation



The shifter bushings will only fit the above referenced models. If you have a different model Mazda including a Mazdaspeed 6, these bushings will not work on your vehicle.

Materials and Time:



General Info.

Part #: Axl-6-958

Time Est: 15 Min

Wrench Rating: 1/5



Tooling List


10mm socket and
long extension



Parts List

(2) 19mm Shifter Bushings
(2) 18mm Shifter Bushings
(4) Washers

Installation Instructions:

1. **Park vehicle on level ground and engage hand brake.** Leave in neutral.
2. **Remove the Stock Shifter Bushings.**
 - A. Unscrew shifter knob.
 - B. Remove center console panel by pulling up around hand brake.
 - C. Remove panel around shifter by pulling up from the front.
 - D. Unplug wires from shifter panel,
 -  Be sure to remember where all of the wires plug back in to.
 - E. Unbolt the shifter base, using a 10mm socket and long extension. (See **Figure 1a** for bolt locations)
 - F. Remove stock shifter bushings.
3. **Install the CorkSport Shifter Bushings**
 - A. Install a shifter bushing under each shifter base. There are two (2) sizes of shifter bushings. (Shown in **Figure 1a**, the bushings with "CS" logo go in the **red circles**, the smaller bushings go in the **green circles**).
 - B. Set supplied washers on top of base over bolt holes.
 - C. Reinstall the OEM bolts. Tighten to approximately 3-4 ft-lbs.
 - D. Plug connectors back into shifter panel. Reinstall shifter panel.
 - E. Reinstall center console panel.
 - F. Reinstall shifter knob.

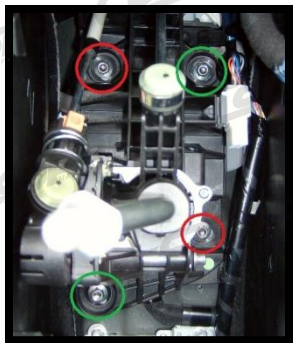


Figure 1a



[Check out our how-to video](#)