

[c o r k s p o r t]



CorkSport Urethane Engine Mount Inserts for the CX7

Tools Required

- 10mm Socket
- 17mm Wrench and Socket
- 19mm Wrench and/or Socket
- 3/8" Drive Ratchet
- Torque Wrench
- Floor Jack
- Jack Stands
- Pry Bar
- Safety Glasses
- Channel Locks or Similar Wide Adjustable Pliers

Contents

- Two CorkSport Urethane Engine Mount Inserts
- 6 Page Installation Instructions

These instructions are for reference only. Use of a factory service manual is recommended. Installation should take approximately 45 minutes.

Read these instructions completely before attempting installation.

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK

Step 1: Jack up front of CX7 and place securely on jack stands.

WARNING: Follow the safety warnings for your jack and jack stands or serious injury or death may occur.

Step 2: Remove eight 10mm head bolts and one plastic clip from under tray and remove under tray.



Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK

Step 3: Locate 17mm head bolt on rear of engine mount to vehicle. Loosen and remove bolt.



Step 4: Locate 17mm head nut and bolt at front of mount to transmission. Loosen bolt and nut.



Step 5: Loosen the two 19mm head bolts on the mount bracket to transmission.

NOTE: This is done to allow the mount to pivot easily. You may find it is not necessary.



Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK

Step 6: With a pry bar, pry the mount up and out of the rear bracket.



Step 7: Install inserts into engine mount.

NOTE: These inserts will fit in the mount one way. You may need to use channel locks or similar type of adjustable pliers to squeeze inserts into mounts.



Step 8: Reinstall mount back into rear bracket. Using the floor jack at the rear of the transmission, line up holes and reinstall the original 17mm head bolt. Tighten to 70ft/lbs.




Pictures continued on next page.

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK



Step 9: Tighten two 19mm head bolts for the front bracket to transmission.

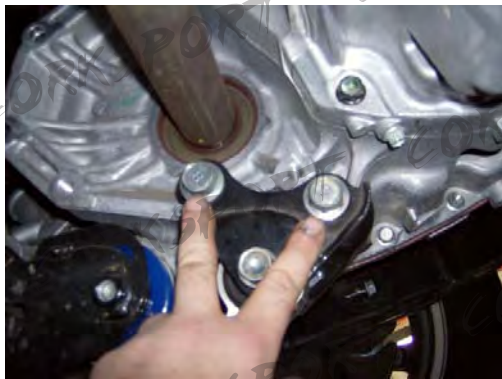

Step 10: Tighten front 17mm head bolt and nut to 43-50ft/lbs.



Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK

Step 11: Reinstall under tray with original eight (8) 10mm head bolts and one plastic clip.



Step 12: Remove CX7 from jack stands. Test drive.

NOTE: You will likely notice more vibration inside the CX7 with the inserts installed. This will subside somewhat after break-in.

Thank you for your purchase. If you have any questions please call CorkSport at 360 260 CORK