


CorkSport DRL Light Kit

9006 Bulb Kit (2) for Mazda Vehicles

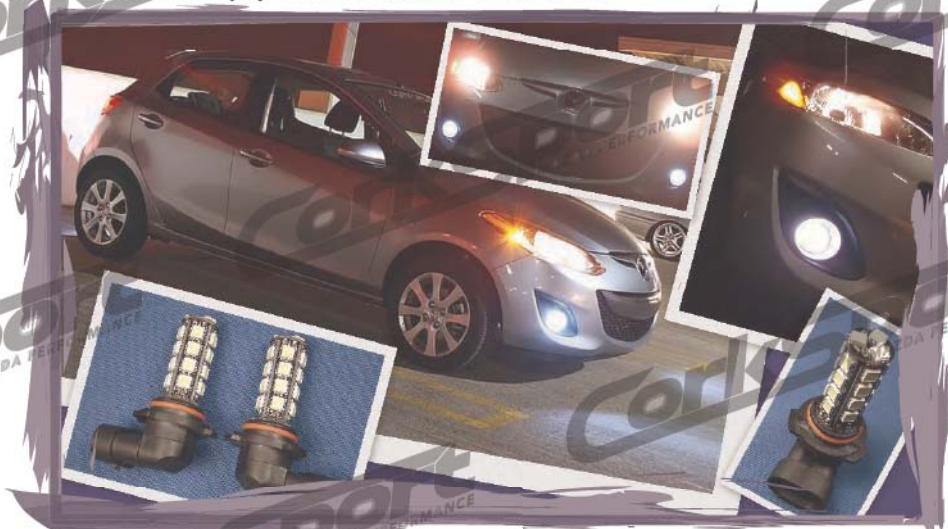

NOTE: These bulbs are intended for replacing the fog/driving lights only. These LED bulbs are not a replacement for headlight bulbs.

NOTE: This is a set of two (2) 9006 bulbs. The below application guide is for reference only. These bulbs fit many other makes and models. Please check your factory bulb type before ordering to ensure correct fitment.

Part Number: Gen-8-9006 Time Estimate: 20-30 min Wrench Rating: 2/5	Model Mazda 3 RX-8	Year 2004-2009 2009-2010+	Trim All (with fog light option) All (with fog light option)
TOOLING LIST: No Tools Required		PARTS LIST: 2x 9006 bulbs with 23 white LED's per bulb (20 on sides & 3 on top)	

For help with installation, call 360-260-CORK (2675)





COVER PAGE

Installation Instructions:

CorkSport DRL Light Kit

9006 Bulb Kit (2) for Mazda Vehicles



How the Instructions Work

To best cover all of our customers experience levels and familiarity with the systems on their Mazda, we have broken our instructions down into numbered steps, each of which has the core information in the header with additional detail as needed depending on your experience. If you have a high level of experience, you can just use the checklist below and then skip to the step number where you need help or assistance. Video assistance may also be available for certain steps and is indicated by the HD icon:  Areas where there is a safety concern are indicated by the warning icon:  Cautionary areas (where parts are fragile, etc) are indicated by the caution icon:  Key tips are indicated with the light bulb icon: 

Overview/Checklist:

This is an overview of each of the steps of the build. You can use this as a reference and a checklist as you button up the work on the car.

1. Installing the CorkSport DRL Light Kit

-  Note: These LED bulbs are a replacement for your fog/driving lights only. They are not intended to replace your main headlight bulbs.
- 1a) Locate the back of your driver's side fog light and unplug the 9006 bulb.
- 1b) Twist the factory bulb counter-clockwise until the bulb comes loose. Remove the bulb.
-  Note: Your fog light housing may look different than the one shown, but the steps remain the same.
- 1c) Remove one of the 9006 CorkSport DRL LED light from the package.
- 1d) Insert the bulb into the fog light housing and lock it into place.
- 1e) Plug in the wire harness into the bulb ensuring that it makes a secure connection.
- 1f) Repeat steps A-E for the passenger fog light.
- 1g) Turn on your fog lights and ensure that they are working properly. If one or both are not working, ensure that both plugs are securely connected.
- 1h) Your fog lights are now successfully installed. Enjoy.

CHECK LIST



Installation Instructions: Corksport DRL Light Kit 9006 Bulb Kit (2) for Mazda Vehicles

1: Installing the CorkSport DRL Light Kit

Note: These LED bulbs are a replacement for your fog/driving lights only. These are not intended to replace your main headlight bulbs.

A) Locate the back of the driver's side fog light and unplug the 9006 bulb by squeezing the blue tab (Red arrow in **Figure 1**) and pulling down.

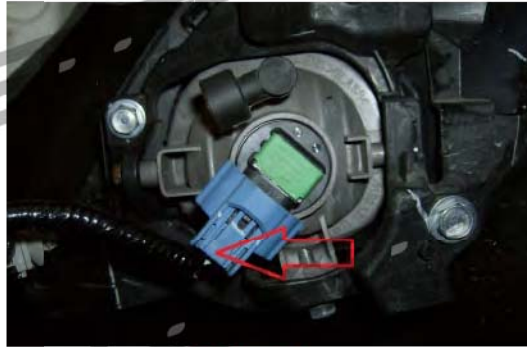


Figure 1

B) Twist the factory bulb counter-clockwise until the bulb comes loose. Remove the bulb as shown below (**Figure 2A, 2B, & 2C**).

Note: Your fog light housing may look different than the one shown, but the steps remain the same.



Figure 2A



Figure 2B



Figure 2C

For help with installation, call 360-260-CORK (2675)

Installation Instructions:

CorkSport DRL Light Kit

9006 Bulb Kit (2) for Mazda Vehicles

1: Installing the CorkSport DRL Light Kit - Continued

- C) Remove one of the 9006 CorkSport DRL LED lights from the package.
- D) Insert the bulb into the fog light housing and twist the bulb clockwise until it locks into place (**Figure 3A**).
- E) Plug in the wire harness into the bulb ensuring that it makes a secure connection (**Figure 3B**).
- F) Repeat steps A-E for the passenger fog light.
- G) Turn on your fog lights and ensure that both lights are properly functioning. If one or both are not working make sure you have the wire harness pushed on all the way and test them again.
- H) Your fog lights should now look like the ones in **Figure 4** below. Enjoy.



Figure 3A



Figure 3B



Figure 4